


REVERSE ANGLES



Reverse angle bays are becoming more and more popular and are predominantly used on "P" shaped conservatories. The following diagram and tables chart the reverse angle deductions.

Remember - the outside trim will now effectively be on the inside!

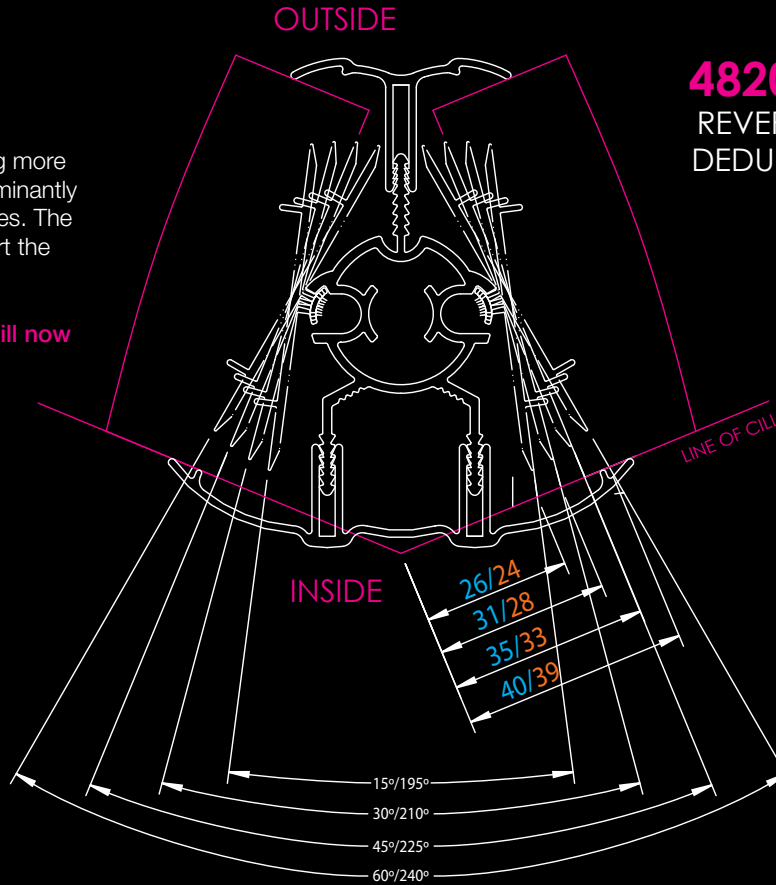

482054 / 482024
 REVERSE ANGLE FRAME
 DEDUCTIONS (PER SIDE)

REVERSE ANGLE	PART CODE	FRAME DEDUCTION PER SIDE (mm)
135° / 225° (60mm)	482033	29 (60mm); 28 (58mm)
150° / 210° (60mm)	482034	33 (60mm); 32 (58mm)
90° (60mm)	482044	As frame depth eg. 60mm
135° / 210° (70mm)	482137	39
135° / 210° (70mm)	482026 / MM13570	35
150° / 210° (70mm)	482027 / MM15070	30
90° (70mm)	482160 / WWL126 / MM9070	As frame depth eg. 70mm